


Webertherm alu base

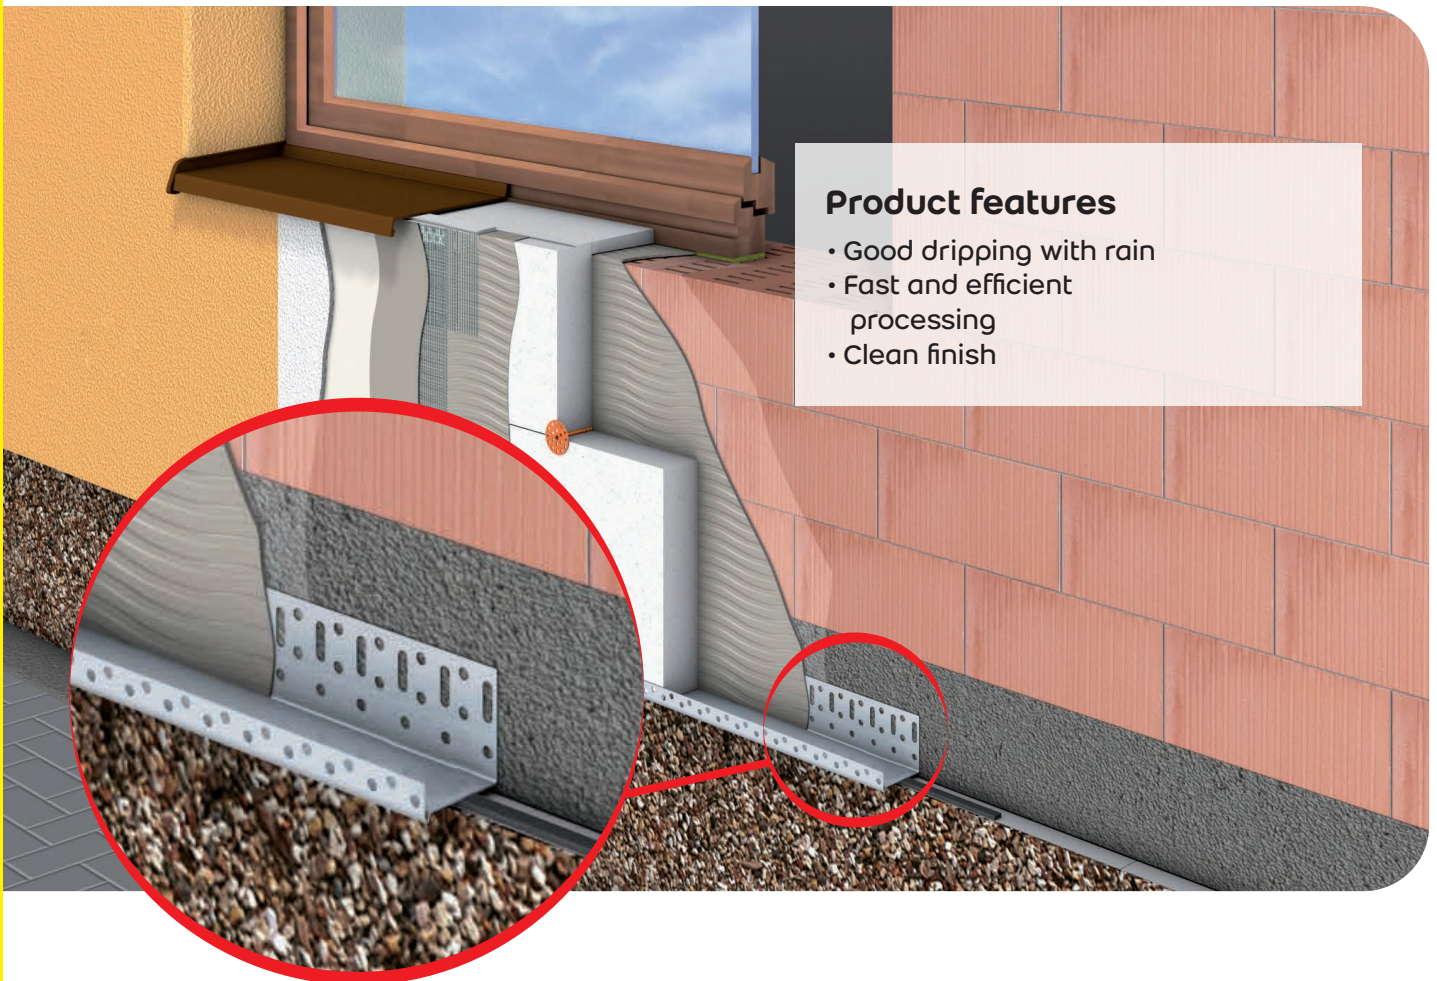

Method of application

- The surface must be even and structurally sound. Check for strength and voids. Rough cut off bulging parts, larger bumps are appropriate with a mortar to compensate.
- Align the aluminum base profile and horizontal right and flood with appropriate impact dowels fix (every 30 cm). The profiles are in the impact area connected at the ends by means of the Sodomco-Weber socket connector per profile.
- After assembly, the profiles are used, the insulation boards. The legs must be completely concealed with tissues are leveled out. The connections must be absolutely windproof (closure be carried out with mortar), in order to prevent ventilation.

Fixing the aluminum base profile is EASY with the Sodomco-Weber mounting!