

Case 03 How to apply scraped Monocouche on lightweight blocks AAC (Aerated Autoclaved Concrete)


Recommended products



Preparation

Ensure all areas are free from any residue that may interfere with the bond of materials to be applied.

Humidify the substrate to clean the dust and regulate porosity.

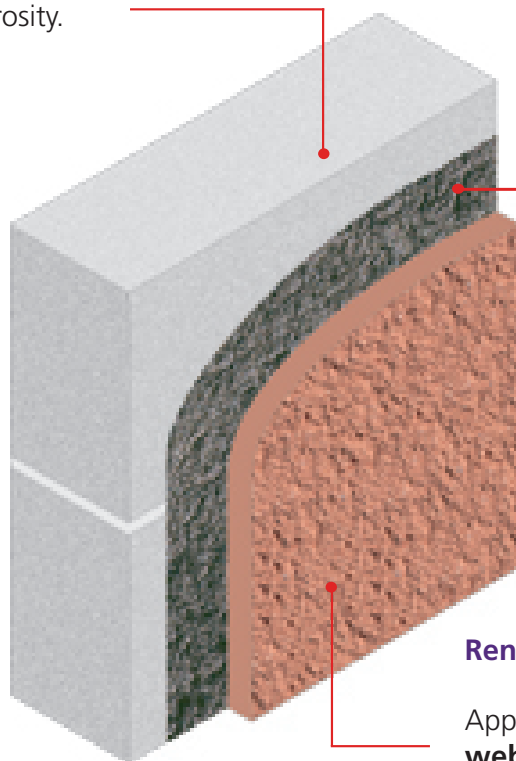

Key Coat

Apply **weber.premix SRC-2**, 2 to 3 mm thickness.

Or Apply **weber.pral PR*** directly on the substrate.

Render

Apply by machine (or hand) **weber.pral F** or **weber.pral K** as a finish decorative render.

Note that by applying the render in junction between concrete and lightweight blocs, use a fiber mesh clothes to prevent from cracks.

** Please refer to our technical department*